

MOTO ARMOR

Instructions Full Glass CageWRX Baja

2– Universal Billet Clamp 1.75”

2 – Bolt ¼-20 × 2”

2 – Bolt ¼-20 × 1/2”

2 – Flat Washer 1/4”

2 – Thumb knob with
rubber washer 1/2”

2 – 1/4” × 3/4” Adhesive Foam (4”)

1 – 1/8” × 1/2” Adhesive Foam (48”)


1 – 1/8” Rubber Trim (4”)

2” Foam Top Two Corners



STEP ONE – Clip the 2 billet mounts into approximate position near the bottom of the front cage tubes. Position the mounts with the threaded center hole facing forward. Use the 2” long bolts to hold the mounts in place. Only tighten a little so that the mount stays in place but still moveable.

STEP TWO – Carefully test fit windshield to see if foam cushion is needed on top lip. Because of variances in manufacturing between different manufactures we include the adhesive foam to cushion and tighten fitment if needed. If there is excessive play at top edge, install foam as shown below. (Top lip of windshield slides under roof to install) Install small piece of edge trim in slot at top of windshield before test fit. This keeps the edge from hitting the intrusion bars.

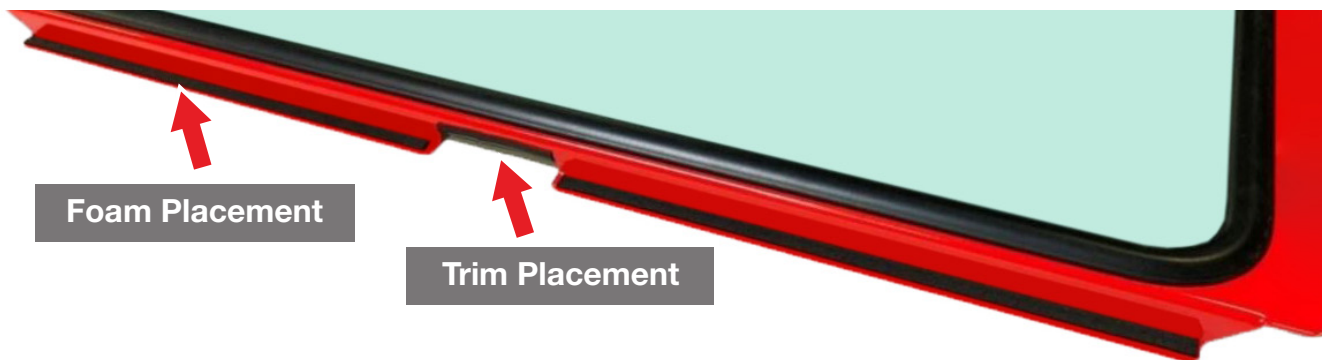

STEP THREE – Place windshield on cage and clamps. move clamps to line up with holes on windshield frame. Use the 1/2” long bolts and flat washers, (or optional thumb screws for quick removal), to attach frame to billet clamps. Tighten 2” Clamp bolts once everything is in the correct position. (Billet clamps can stay in place on cage to keep the correct position for easy removal and re-install after initial installation.)

STEP FOUR – When windshield is in correct position, tighten the 2” long bolts on the clamps to lock them into position. You can leave the clamps on the roll cage if you take off the windshield to keep the same position when re-installed.