

MOTO ARMOR

Glass Windshield Instructions for Polaris General

4 – Hook Clamp


4 – Bolt $\frac{1}{4}$ -20 \times 1"

4 – Flat Washer $\frac{1}{4}$ "

4 – Lock Washer

1 – $\frac{3}{8}$ " Adhesive Bulb Foam (96")

2 – $\frac{3}{4}$ " Adhesive Bulb Foam (6")

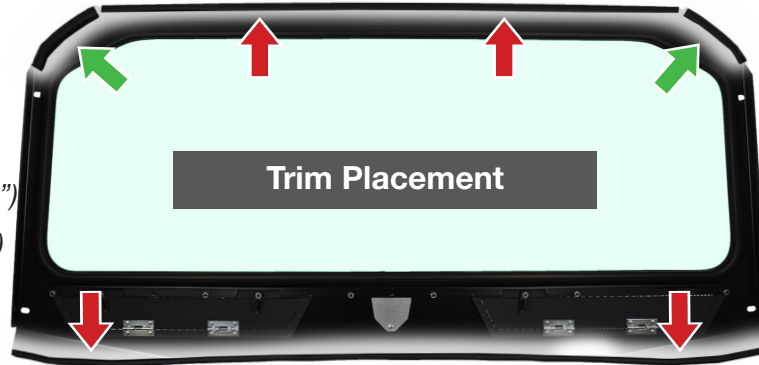

Install windshield wiper before first step if applicable. There is another instruction sheet for wiper installation.

STEP ONE – With the windshield laying on its front place the large bulb adhesive trim on the two top corners as described in the figure above. The smaller bulb trim will be used along the center top and the bottom of the windshield frame. **Take your time applying the trim. The adhesive on the trim is extremely powerful and it will not release once applied.**

STEP TWO – Carefully align the windshield with the front of the roll cage in the approximate mounting location. Use the supplied clamps, bolts and washers to install the windshield onto the machine. Be careful not to over tighten the bolts.