



MOTO ARMOR

Polaris RZR Pro Grill Instructions

SKU: MA-RZPRO-GRILL

For: Polaris RZR Pro

IMPORTANT: Please read through all instructions before installing.



Installation video on You Tube
<https://youtu.be/-SOGcOkASpw>

Hardware for main grill

12x – 10-24 x 1/2" Bolts Blk
2x – 10-24 x 3/4" Bolts Blk
2x – 10-24 x 1 1/2" Bolts Blk
16x – 10-24 Lock Nuts
2x – 10-24 Nut Clips
2x – #10 Rubber Washer
2x – #10 x 3/8 Plastic Spacers
2x – 1/8" Plastic Spacers
2x – Grill Tabs
2x – 6-32 x 1/2" Bolt Blk
2x – 6-32 Lock Nuts
1x – 7/32" drill bit

Hardware for Lower grills

6x – 10-24 x 1/2" Bolts Blk
4x – 10-24 x 1" Bolts Blk
6x – 10-24 Lock Nuts
4x – 10-24 T-Nuts



Note: Skip Lower Grill if you did not purchase the full set.

Lower Grills:

Step 1: Remove the OEM grill by pushing down the two tabs on top of the grill and gently pulling. *This is required to reach where the grill attaches to the machine.*

Step 2: Bolt the border to the grill using 1/2" bolts leaving circled holes empty.

Step 3: Use 1" bolt and a T-nut. The T-nut goes behind the plastic grill. Spikes of the T-nut should face the front of the machine. **Don't over tighten the mounting bolts; it may cause plastic to deform.**

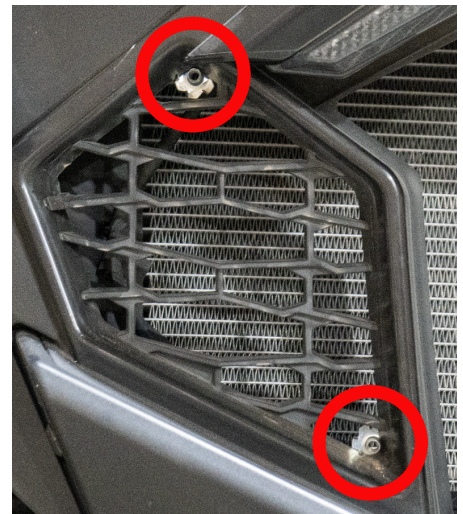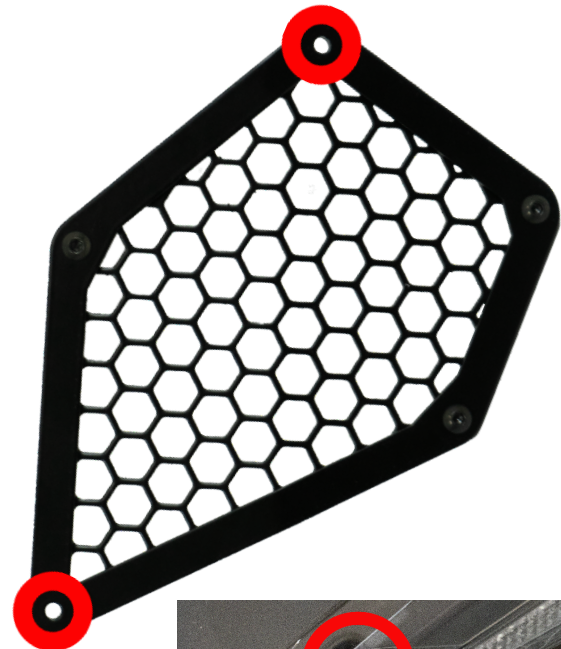

Main Grill:

Step 1: Remove the OEM grill by pushing down the two tabs on top of the grill and gently pulling.

Step 2: Attach the logo on to the back of the grill using 6-32 x $\frac{3}{8}$ " bolts. Attach the border to the front of the grill using the 10-24 x $\frac{1}{2}$ " bolts and 10-24 lock nuts. Leave the holes circled in red and green empty.

Step 3: Attach the tabs on the bottom (holes circled in green) using the $\frac{3}{4}$ " Bolts and the $\frac{1}{8}$ " Spacers. The tab should be on the back of the grill with the spacer between the grill and the spacer. tab should be sticking out the bottom of the grill.

Step 4: Hold the grill in place and mark the top holes to be drilled (Holes circled in red). Make sure that the tabs go into their correct spots. Use the $\frac{7}{32}$ " bit to drill into the plastic. **Do not drill into the radiator behind the plastic.** Put the nut clips on the plastic, line up nut clips with drilled holes.

Step 5: Start the $1\frac{1}{2}$ " bolts in the grill, put the $\frac{3}{8}$ " spacers on the bolt on the back of the grill with the rubber washers holding on the spacer, shown in picture. Put the grill in place and tighten the bolts into the clip nuts. **Don't over tighten the mounting bolts; it may cause plastic to deform.**

