

# MOTO ARMOR

## Glass Windshield for R Max



*Read through all instructions before install.*

### HARDWARE LIST

- 4 – Universal Billet Clamp 2"
- 4 – Bolt 1/4-20 x 2.5"
- 4 – Flat Washer 1/4"
- 4 – Lock Washer

### TOOL LIST

- Hex tool 5/32" (clamp bolts)
- Torx T27 Tool (roof)

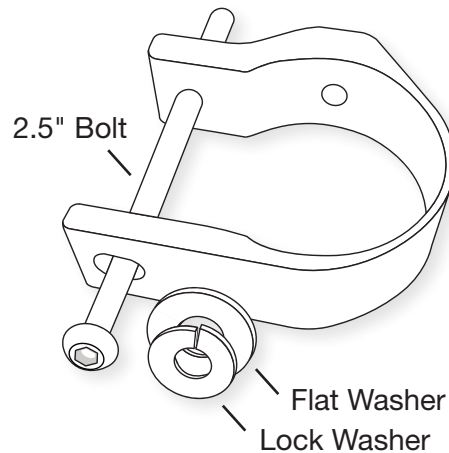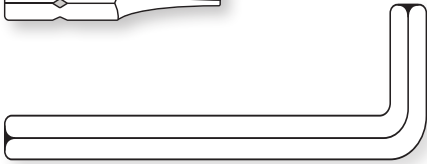

**STEP ONE** – Remove the front clamps of the roof using a T27 Torx tool. This will allow you to slip the windshield in place for installation.

**STEP TWO** – At this point you can place the windshield on your machine. Slide the clamps onto the bars going from the outside in. The flat side of the clamp faces forward towards the front of the machine.

**STEP THREE** – Combine the lock washer, flat washer and bolts together in that order. Pre-thread all four clamps before tightening. Make sure the windshield is in the position you want it to be. You may need to slightly lift it off of the dash depending on the fitment of your particular RMAX. Frames and roll cages have slight differences and vary from vehicle to vehicle.

**STEP FOUR** – DO NOT OVER TIGHTEN Using a 1/8" hex key tighten all of the bolts. You will want to have it tight enough to stay stable but not so tight that it bends the windshield frame. Over tightening will distort the frame causing the windshield glass to break. If you are using side mirrors take into account the thickness of the mirror clamp. If the top part of the clamp is too thick and causes the windshield to bend or distort around it will eventually cause the windshield to break. We recommend using Moto Armor side mirrors as this will not be an issue.



**YOUTUBE** – Use your camera to scan the QR code for a step by step Installation video.