



Instructions Turbo S 2 Roof

Read through all instructions before install.

6 – Rubber Coated Clamp 1.75”

4 – Bolt 1/4-20 x 3/4”

6 – Bolt 1/4-20 x 1.25”

10 – Locknut 1/4”

28 – Flat Washer 1/4”

1 – 1/8 x 1/2” Adhesive Foam (165”)

4 – Bolt 10/24 x 3/4”


4 – Lock Nut 10/24

STEP ONE – Optional: Install foam on the cage or on the roof where the roof contacts the cage. This will minimize any rattles.

STEP TWO – Place the clamps on the roll cage in the approximate locations to line up with the roof holes.

STEP THREE – Install the rear brackets onto the roll cage and loosely tighten. (Finish tightening after step 4)

STEP FOUR – Align the front roof holes with the front brackets. Loosely tighten all of the clamp bolts starting with the first two. Then line up and install the rear brackets into the roof with the 3/4” bolts. Finish tightening all the the clamps.

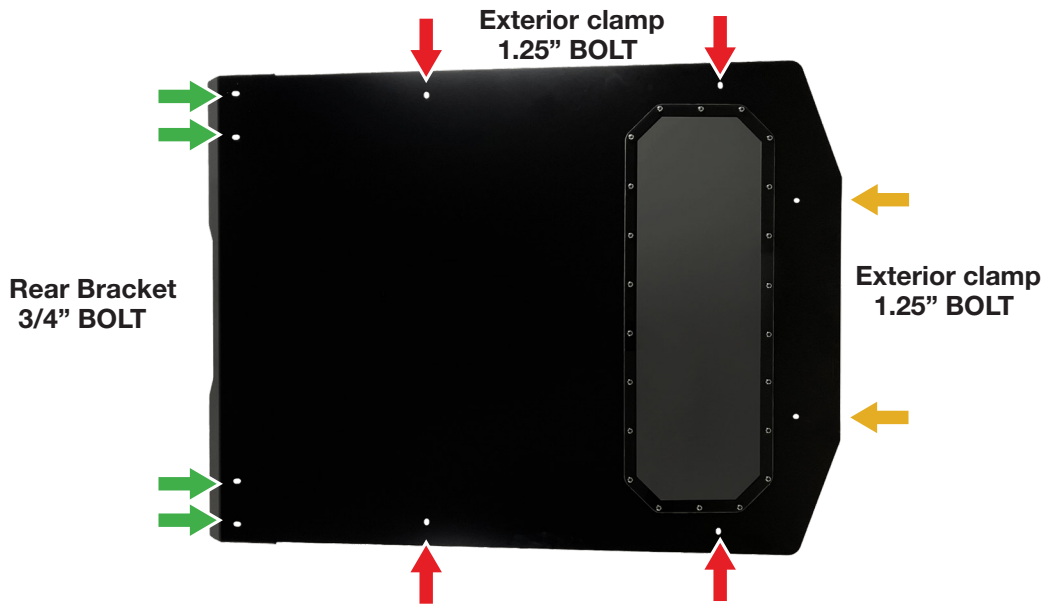

Rear Bracket

Clamp Orientation

Bolt 1/4-20 x 3/4”

Bolt 10/24 x 3/4”

