



## Instructions Turbo S 4 Roof

Read through all instructions before install.

**8** – Rubber Coated Clamp 1.75"

**7** – Bolt  $\frac{1}{4}$ -20  $\times$   $\frac{3}{4}$ "

**8** – Bolt  $\frac{1}{4}$ -20  $\times$  1.25"

**15** – Locknut  $\frac{1}{4}$ "


**40** – Flat Washer  $\frac{1}{4}$ "

**1** –  $\frac{1}{8} \times \frac{1}{2}$ " Adhesive Foam (170")

**2** – 18mm Hex Bolts

**4** – Bolt  $\frac{10}{24} \times \frac{3}{4}$ "

**4** – Lock Nut  $\frac{10}{24}$

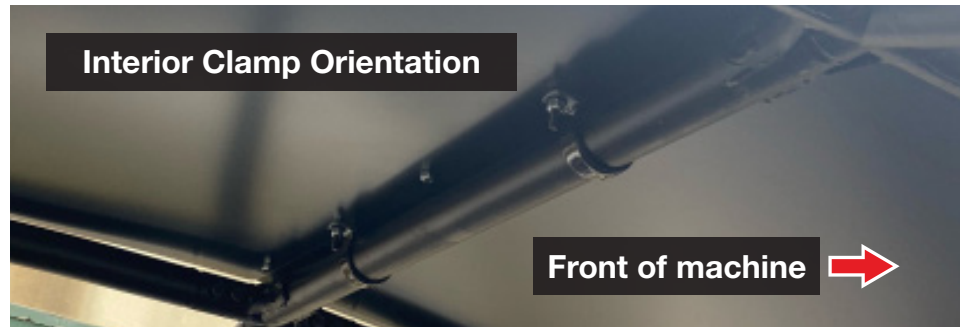

**STEP ONE** – Optional: Install foam on the cage or on the roof where the roof contacts the cage. Also, foam can be placed between the over lapping area of the two halves but is not nessecary.

**STEP TWO** – Bolt the roof together using the three included  $\frac{3}{4}$ " bolts on the 2 outside holes and single center hole.

**STEP THREE** – Put the clamps on the roll cage in the approximate locations to line up with the roof holes.

