



Voodoo X3 windshield Instructions

For: Voodoo Can Am X3

IMPORTANT: Please read through all instructions before installing. Thank you.


Hardware:

- 4x - 1.75" Billet Clamps Blk
- 2x - 1/4-20 x 2" Hex Bolts Blk
- 2x - 1/4-20 x 2.5" Bolts Blk
- 2x - 1/4-20 x 1/2" Bolts Blk
- 6x - Split Lock Washers
- 6x - Flat Washers
- 50" - Adhesive Foam



Step 1: Loosen the front of the roof to allow room to slide the windshield under. Longer fasteners may be required for the roof after the windshield is installed.

Step 2: Put the 4 billet clamps in approximate locations on the cage. The bottom two clamps situate so the openings of the clamps point toward the middle of the machine with the raised edge facing forward (*Shown in picture to the right*). Use the hex bolts with a split lock washer and flat washer to hold the clamp in place. The top two clamps point toward the middle of the machine with the raised edge facing backward (*Shown in the bottom picture*). The top clamps will slide around on the cage until they are secured in place with the windshield.

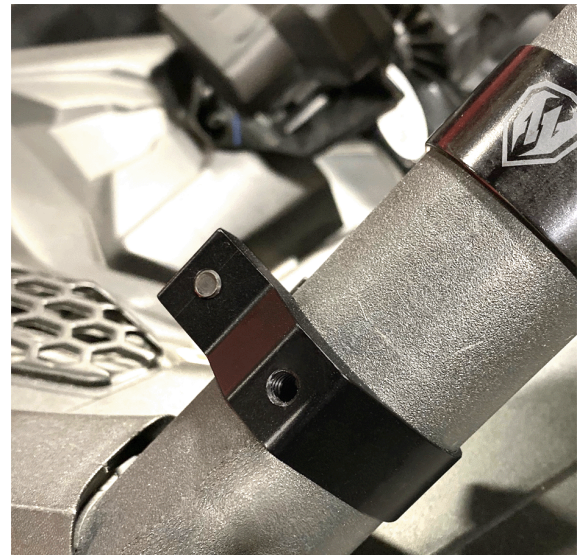

Step 3: Using 2 people put the windshield on the machine. Bolt the windshield into the bottom clamps with the 1/2" bolts and both types of washers. The top clamps get the 2.5" bolts with washers and lock washers. Once in place tighten all the bolts.

Step 4: Place the adhesive foam on the top of the windshield where the roof rests on the windshield to prevent rattling. You may not use all of the foam. The red line, in the top picture, is the approximate location of foam.

