



Can-Am Maverick X3 Grill instructions

SKU: MA-X3-GRILL


For: Can-Am Maverick X3

IMPORTANT: Please read through all instructions before installing. Thank you.

X3 Grill Instructions Video



Hardware:	
QTY	Description
6	¼-20 x ½" Bolts Blk
12	¼-20 Lock Nuts SS
6	¼-20 x 1" Bolts Blk
10	10-24 x ½" Bolts Blk
12	10-24 Lock Nuts
2	10-24 x 1.5" Bolts Blk
2	10-24 T-nuts
2	10-24 x 1" Bolts Blk
8	Flat Washers Blk
2	6-32 x 3/8" Bolt Blk
2	6-32 Lock Nut
1	7/32" Drill Bit
1	Logo Backing Plate

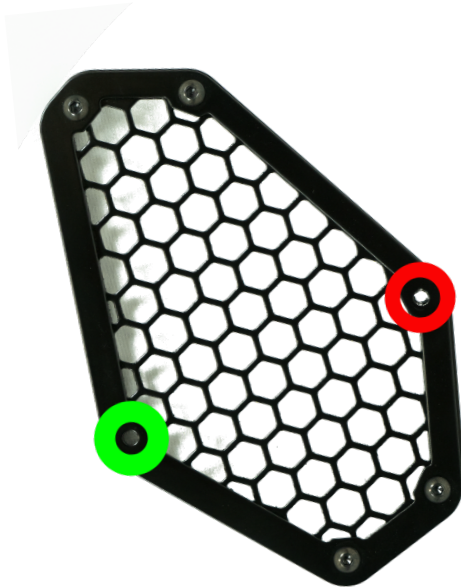

Step 1: Mount lower grills.

To gain easier access to the back of the grill, remove the hood by pulling it upwards. Be cautious to avoid breaking the clips. Remove the factory grill by taking out the two bolts situated behind the grill. Gently pull out the factory grill. Hold the lower grill in place and mark the hole circled in green. Use the provided 7/32" bit to carefully drill the hole. **Ensure that you avoid hitting the radiator while drilling.**

Utilize 10-24 x ½ bolts and 10-24 lock nuts to attach the trim to the grill. Leave both the green and red circled holes empty; these holes will be used for mounting purposes.

Proceed by unbolting the factory bolt located under the grill, shown circled in red in the top right picture. This step is to gain accessibility to the back of the grill. Mount the new grill by using a 10-24 x 1" bolt, a 10-24 lock nut, and a flat washer through the previously drilled hole. Insert the 1.5" bolt through the upper hole and use the provided t-nut on the back. Ensure that the spikes on the t-nut face outward, securely gripping the stock grill as shown in the provided picture. While attaching the grill, exercise caution not to overtighten, as this may cause deformation of the plastic components.



Step 2: Install the main grill

Begin by securing the border to the grill using $\frac{1}{4}$ -20 x $\frac{1}{2}$ " bolts and $\frac{1}{4}$ -20 lock nuts. Leave the circled holes empty; these will be utilized for mounting the grill to the machine.

Attach the logo plate to the rear of the grill using a 6-32 x $\frac{3}{8}$ " bolt and a 6-32 lock nut.

Proceed to bolt the grill onto the assembly using $\frac{1}{4}$ -20 x 1" bolts, $\frac{1}{4}$ -20 lock nuts, and flat washers. Ensure that each bolt passes through the designated tabs.

It is important not to over tighten the bolts, as excessive force might lead to deformation of the plastic components.

Step 3: Install the hood grill

Start by holding the grill up to the hood in the place you want it to be, mark the holes. Use the included $\frac{7}{32}$ " drill bit to drill both holes.

Use 10-24 x $\frac{1}{2}$ " and 10-24 lock nuts to secure the hood grill to the hood. **Do not over tighten, it may cause plastic to deform.**

Replace the hood by pressing the hood back into place, make sure all of the clips go into their correct holes. **Be careful not to break any clips.**

